


Projecting a waypoint from current position

GPSMAP® 64/64s




Press and hold **MARK** to get your current position. Once selected, press **MENU**, highlight “project waypoint” and press **ENTER**

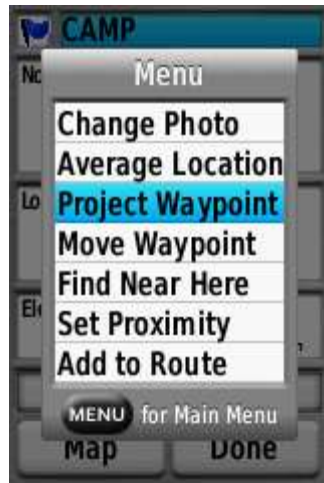

Enter the Bearing in degrees, scroll down to **DONE** and press **ENTER**



Select the correct distance units.

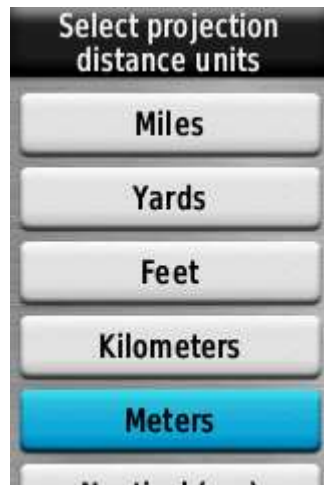

Enter the distance you want to travel.



The projected waypoint screen will appear showing distance and bearing. At this point, save and edit your waypoint name.



Once your projected waypoint is saved, scroll to and press **GO** where you will be taken to a map screen showing bearing and “distance to dest”.

